MICROWAVE OVEN

MW5694W (WHITE)

MW5695G (GRAY)

SERVICE Manual

MICROWAVE OVEN

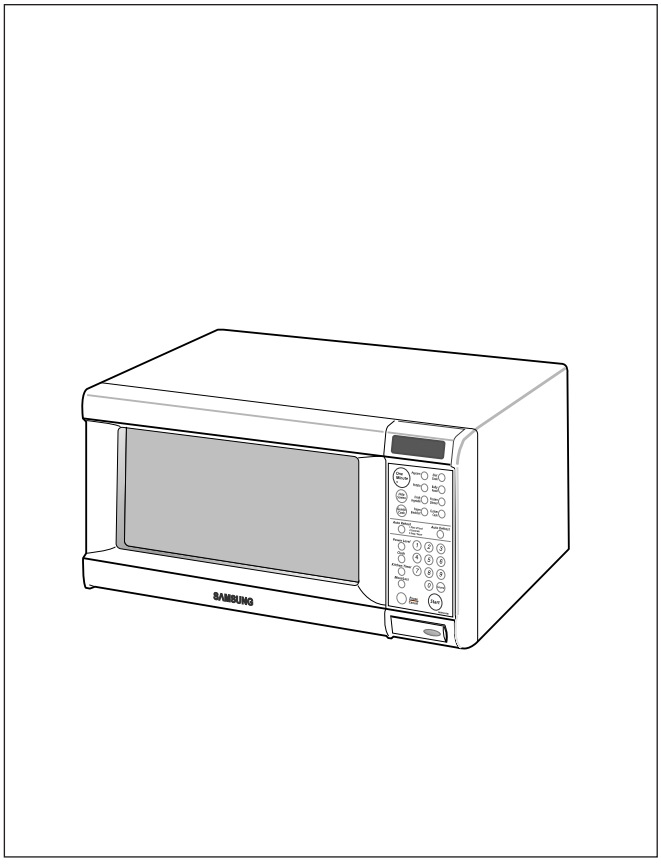

CONTENTS

1. Precaution

2. Specifications

3. Operating Instructions

4. Disassembly and Reassembly

5. Alignment and Adjustments

6. Troubleshooting

7. Exploded Views and Parts List

8. PCB Diagrams

9. Schematic Diagrams

SECA

1. Precaution

Follow these special safety precautions. Although the microwave oven is completely safe during ordinary use, repair work can be extremely hazardous due to possible exposure to microwave radiation, as well as potentially lethal high voltages and currents.

1-1 Safety precautions (⚠)

1. All repairs should be done in accordance with the procedures described in this manual. This product complies with Federal Performance Standard 21 CFR Subchapter J (DHHS).

2. Microwave emission check should be performed to prior to servicing if the oven is operative.

3. If the oven operates with the door open : Instruct the user not to operate the oven and contact the manufacturer and the center for devices and radiological health immediatly.

4. Notify the Central Service Center if the microwave leakage exceeds 5 mW/cm^2

5. Check all grounds.

6. Do not power the MWO from a "2-prong" AC cord. Be sure that all of the built-in protective devices are replaced. Restore any missing protective shields.

7. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including: nonmetallic control knobs and compartment covers.

8. Make sure that there are no cabinet openings through which people--particularly children--might insert objects and contact dangerous voltages. Examples: Lamp hole, ventilation slots.

9. Inform the manufacturer of any oven found to have emmission in excess of 5 mW/cm^2, Make repairs to bring the unit into compliance at no cost to owner and try to determine cause.
   Instruct owner not to use oven until it has been brought into compliance.

   CENTRAL SERVICE CENTER

10. Service technicians should remove their watches while repairing an MWO.

11. To avoid any possible radiation hazard, replace parts in accordance with the wiring diagram. Also, use only the exact replacements for the following parts: Primary , door sensing, power relay and interlock monitor switch.

12. If the fuse is blown by the Interlock Monitor Switch: Replace all of the following at the same time: Primary door sensing and power relay as well as the Interlock Monitor Switch. The correct adjustment of these switches is described elsewhere in this manual. Make sure that the fuse has the correct rating for the particular model being repaired.

13. Design Alteration Warning:
    Use exact replacement parts only, i.e., only those that are specified in the drawings and parts lists of this manual. This is especially important for the Interlock switches, described above. Never alter or add to the mechanical or electrical design of the MWO. Any design changes or additions will void the manufacturer's warranty.10.Always unplug the unit's AC power cord from the AC power source before attempting to remove or reinstall any component or assembly.

14. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.

15. Some semiconductor ("solid state") devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs). Examples include integrated circuits and field-effect transistors.

    Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground.

1-2 Special Servicing Precautions (Continued)

16. Always connect a test instrument's ground lead to the instrument chassis ground *before* connecting the positive lead; always remove the instrument's ground lead last.

17. When checking the continuity of the witches or transformer, always make sure that the power is OFF, and one of the lead wires is disconnected.

18. Components that are critical for safety are indicated in the circuit diagram by shading, ⚠ or ⚠ .

19. Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

1-3 Special High Voltage Precautions

1. High Voltage Warning
   Do not attempt to measure any of the high voltages--this includes the filament voltage of the magnetron. High voltage is present during any cook cycle.

   Before touching any components or wiring, always unplug the oven and discharge the high voltage capacitor (See Figure 1-1)

2. The high-voltage capacitor remains charged about 30 seconds after disconnection. Short the negative terminal of the high-voltage capacitor to the oven chassis. (Use a screwdriver.)

3. High voltage is maintained within specified limits by close-tolerance, safety-related components and adjustments. If the high voltage exceeds the specified limits, check each of the special components.

Fig. 1-1. Discharging the High Voltage Capacitor

2. Specifications

2-1 Table of Specifications

ITEM / MODEL	MW5694W / MW5695G
TIMER	99 MINUTES 99 SECONDS
POWER SOURCE	120V/60HZ, AC
POWER CONSUMPTION	MICROWAVE : 1,400W
OUTPUT POWER	FROM 100W TO 1000W (10 LEVEL POWER)
	(IEC-705 TEST PROCEDURE)
OPERATING FREQUENCY	2,450MHz
MAGNETRON	OM75PH(31)ESS
COOLING METHOD	COOLING FAN MOTOR
OUTSIDE DIMENSIONS	$20^{11/32}$(W) x $11^{11/16}$(H) x $14^{7/8}$(D)
NET WEIGHT	35.3 lbs.
SHIPPING WEIGHT	38.6 lbs

2-2 Comparison Chart

FEATURE / MODEL	MW5694W / MW5695G
MORE/LESS	O
AUTO REHEAT	O
AUTO DEFROST	O
KITCHEN TIMER	O
POWER LEVEL	O
INSTANT COOK	O
ONE MINUTE	O
CHILD LOCK	O
CLOCK	O
SOUND	O
DEMO MODE	O
HELP SCREEN	O
GENTLE COOK	O

3. Operating Instructions

3-1 Control Panel

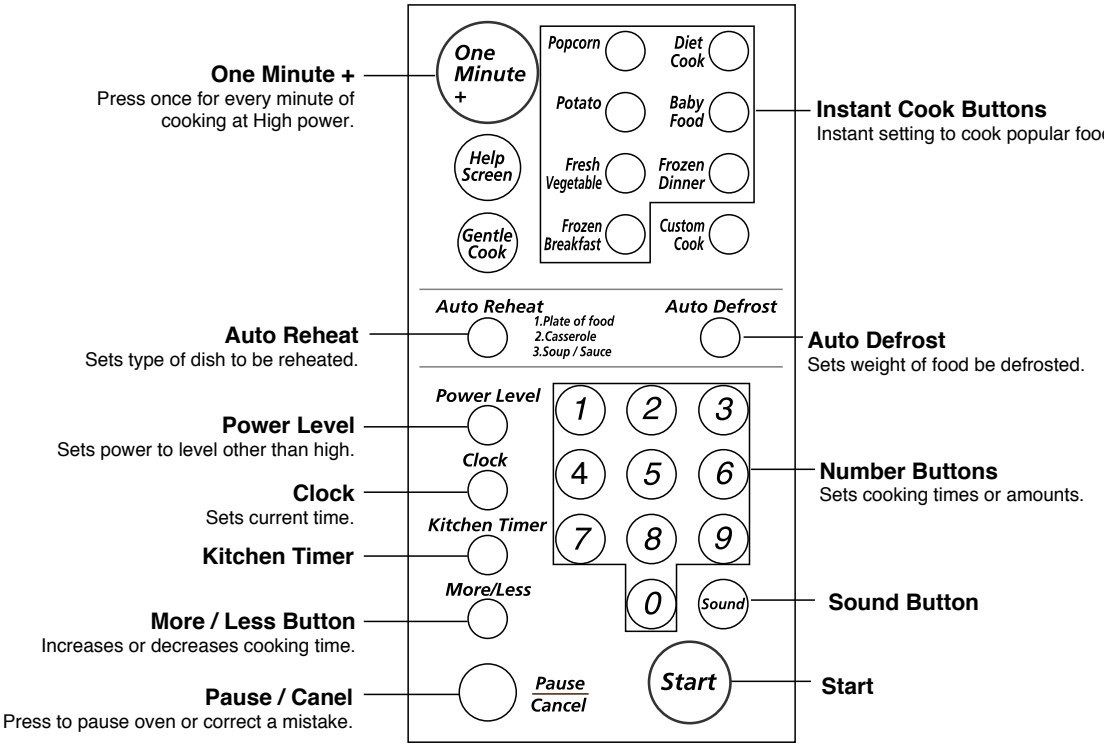

One Minute +
Press once for every minute of cooking at High power.

Instant Cook Buttons
Instant setting to cook popular foods.

Auto Reheat
Sets type of dish to be reheated.

Auto Defrost
Sets weight of food be defrosted.

Power Level
Sets power to level other than high.

Number Buttons
Sets cooking times or amounts.

Clock
Sets current time.

Kitchen Timer

Sound Button

More / Less Button
Increases or decreases cooking time.

Pause / Canel
Press to pause oven or correct a mistake.

Start

3-2 Features & External Views

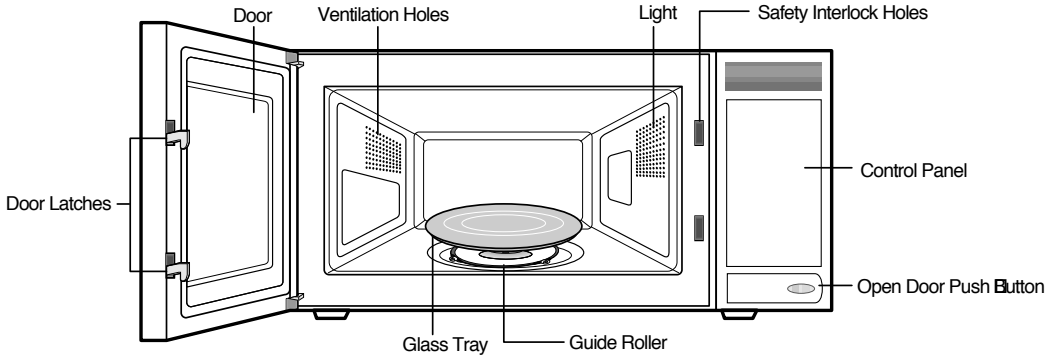

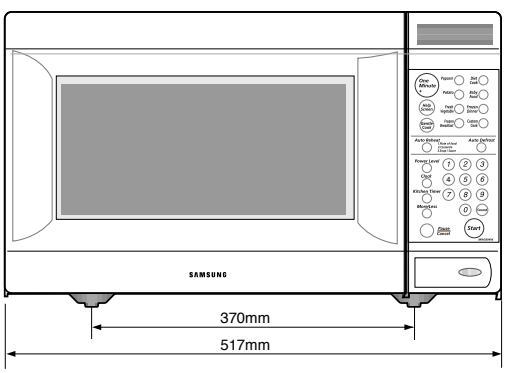

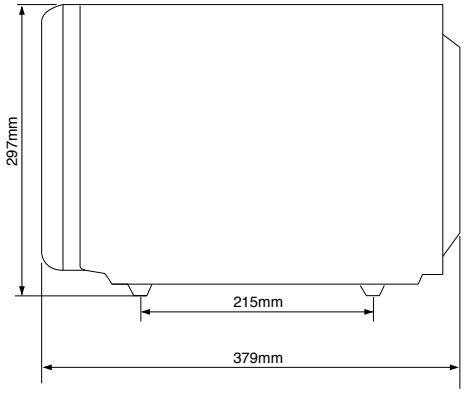

4. Disassembly and Reassembly

4-1 Replacement of Magnetron, Motor Assembly and Lamp

Remove the magnetron including the shield case, permanent magnet, choke coils and capacitors (all of which are contained in one assembly).

1. Disconnect all lead wires from the magnetron and lamp.
2. Remove the air cover.
3. Remove screws securing the magnetron to the wave guide.
4. Take out the magnetron very carefully.
5. Remove tow screws from the back panel of fan motor assembly.
6. Take out the fan motor assembly.
7. Remove the oven lamp by pulling out from hole of air cover.

NOTE1: When removing the magnetron, make sure that its antenna does not hit any adjacent parts, or it may be damaged.

NOTE2: When replacing the magnetron, be sure to remount the magnetron gasket in the correct position and make sure the gasket is in good condition.

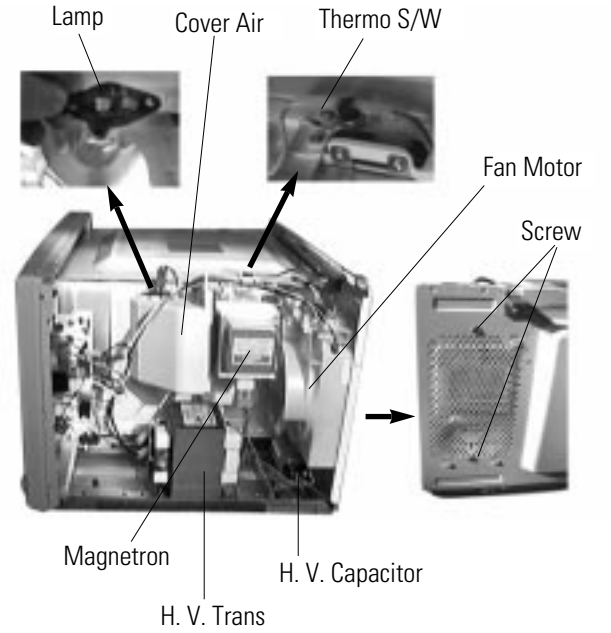

4-2 Replacement of High Voltage Transformer

1. Discharge the high voltage capacitor.
2. Disconnect all the leads.
3. Remove the mounting bolts.
4. Reconnect the leads correctly and firmly.

4-3 Replacement of Door Assembly

4-3-1 Removal of Door Assembly

Remove hex bolts securing the upper hinge and lower hinge. Then remove the door assembly.

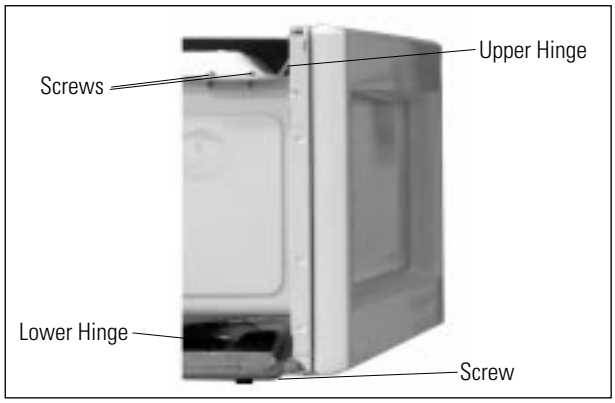

4-3-2 Removal of Door "C"

Insert flat screwdriver into the gap between Door "E" and Door "C" to remove Door "C". Be careful when handling Door "C" because it is fragile.

4-3-3 Removal of Door "E"

Following the procedure as shown in the figure, insert and bend a thin metal plate between Door "E" and Door "A" until you hear the 'tick' sound.

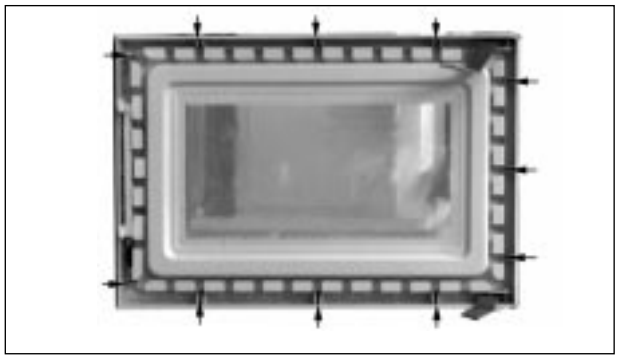

1. Insertion depth of the thin metal plate should be 0.5mm or less.

4-3-4 Removal of Key Door & Spring

Remove pin hinge from Door "E"
Detach spring from Door "E" and key door.

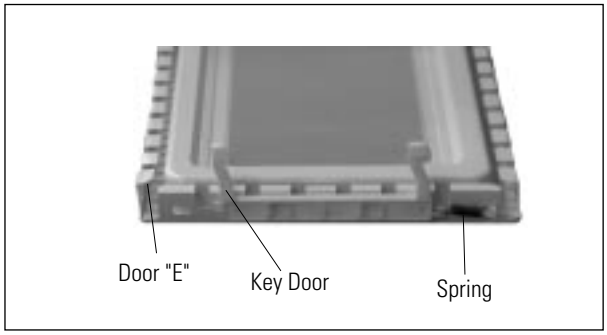

4-3-5 Reassembly Test

After replacement of the defective component parts of the door, reassemble it and follow the instructions below for proper installation and adjustment so as to prevent an excessive microwave leakage.

1. When mounting the door to the oven, be sure to adjust the door parallel to the bottom line of the oven face plate by moving the upper hinge and lower hinge in the direction necessary for proper alignment.
2. Adjust so that the door has no play between the inner door surface and oven front surface. If the door assembly is not mounted properly, microwave energy may leak from the space between the door and oven.
3. Do the microwave leakage test.

4-4 Replacement of Fuse

1. Disconnect the oven from the power source.
2. Remove the 20A fuse in the fuse holder.
3. When replacing the 20A fuse, be sure to use an exact replacement part. If new 20A fuse blows out again after replacement, check the primary interlock switch, door sensing switch, power relay and interlock monitor switch.
4. When the above three switches operate properly, check if any other part such as the control circuit board, fan motor or high voltage transformer is defective.

4-5 Replacement of Drive Motor

1. Take out the glass tray and the guide roller from the cavity.
2. Turn the oven upside down to replace the drive motor.
3. Remove a screw securing the drive motor cover or disconnect the drive motor cover from base plate by nipper.
4. Disconnect all the lead wires from the drive motor.
5. Remove screws securing the drive motor to the cavity.
6. Remove the drive motor and the coupler.
7. When replacing the drive motor, be sure to remount it in the correct position with the coupler.
8. Connect all the leads to the drive motor.
9. Screw the drive motor cover to the base plate with a screw driver.

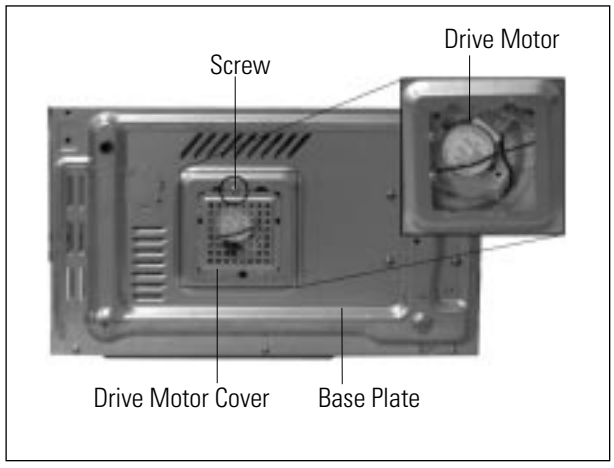

4-6 Replacement of Control Circuit Board

4-6-1 Removal of Control Box Assembly

1. Be sure to ground any static electric charge in your body and never touch the control circuit.
2. Disconnect the connectors from the control circuit board.
3. Remove screws securing the control box assembly.
4. Remove the screw securing the ground tail of the keyboard.

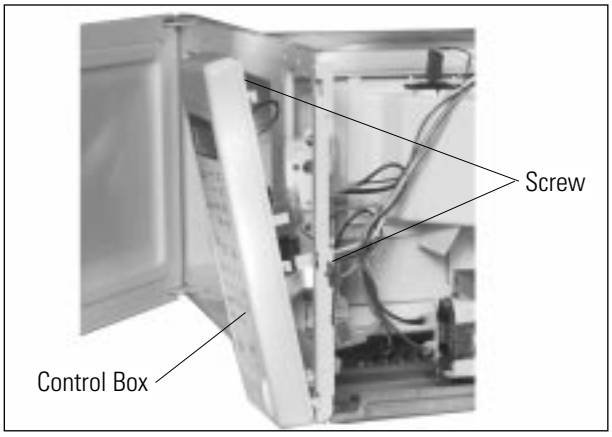

4-6-2 Removal of P.C.B Assembly

1. Pull the lever end of the plastic fastener and remove the Flexible Printed Circuit(FPC) of membrane panel.
2. Remove screw securing the control circuit board.
3. Lift up the control circuit board from the Ass'y control box.
4. When reconnecting the FPC connector, make sure that the holes on the connector are properly engaged with the hooks on the Plastic Fastener.

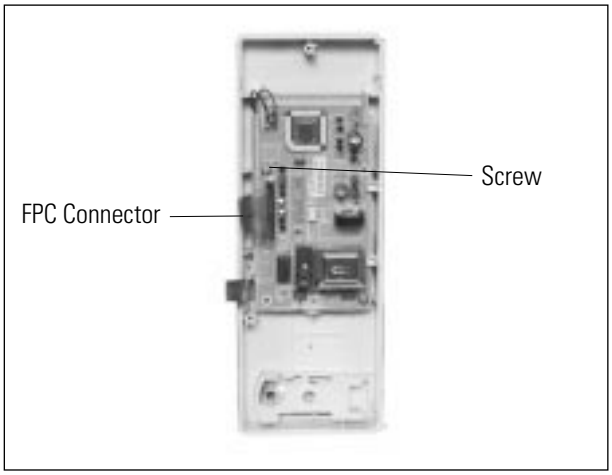

4-6-3 Removal of Window Display & Membrane Panel

1. Window display should not be disassembled as its mounting tabs will be broken. If repair work is difficult, replace with Ass'y control panel.
2. The membrane key board is attached to the escutcheon base with doublefaced adhesive tape. Therefore, applying hot air such as using of hair dryer is recommended for smoother removal.
3. When installing new membrane key board, make sure that the surface of escutcheon base is cleaned sufficiently so that any problems (shorted contacts or uneven surface) can be avoided.

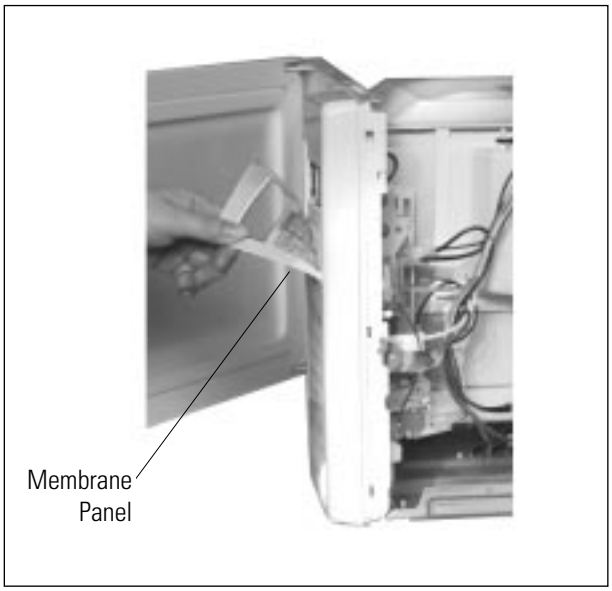

5. Alignment and Adjustments

PRECAUTION!

1. High voltage is present at the high voltage terminals during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components or wiring, always unplug the oven from its power source and discharge the high voltage capacitor.

5-1 High Voltage Transformer

1. Remove connectors from the transformer terminals and check continuity.
2. Normal resistance readings are as follows:

Secondary	81Ω ± 10%
Filament	Shows Continuity
Primary	0.34Ω ± 10%

(Room temperature = 20˚C)

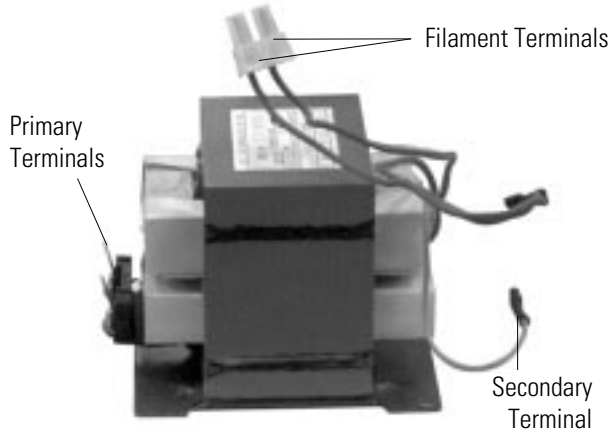

5-2 Low Voltage Transformer

1. The low voltage transformer is located on the control circuit board.
2. Remove the low voltage transformer from the PCB Ass'y and check continuity.
3. Normal resistor reading is shown in the table.

Terminals	Resistance	
	SLV-5574U(DN)	SLV-5574U(CE)
1~2(Input)	264.3Ω	249.1Ω
4~5(Output17V)	11.22Ω	9.245Ω
7~8(Output2.7V)	2.213Ω	1.735Ω

5-3 Magnetron

1. Continuity checks can indicate only an open filament or a shorted magnetron. To diagnose an open filament or shorted magnetron :
2. Isolate the magnetron from the circuit by disconnecting its leads.
3. A continuity check across the magnetron filament terminals should indicate one ohm or less.
4. A continuity check between each filament terminal and magnetron case should read open.

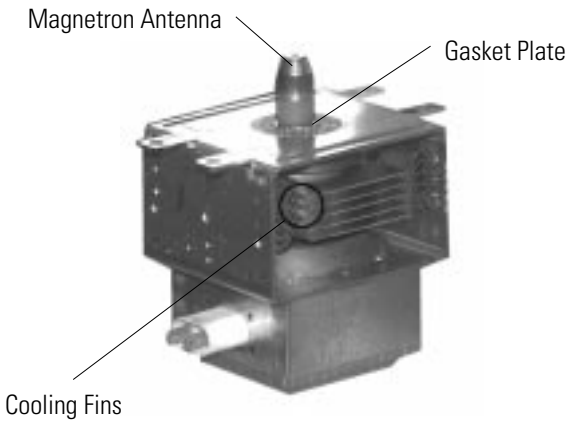

5-4 High Voltage Capacitor

1. Check continuity of the capacitor with the meter set at the highest resistance scale.
2. Once the capacitor is charged, a normal capacitor shows continuity for a short time, and then indicates 9MΩ.
3. A shorted capacitor will show continuous continuity.
4. An open capacitor will show constant 9MΩ.
5. Resistance between each terminal and chassis should read infinite.

5-5 High Voltage Diode

1. Isolate the diode from the circuit by disconnecting its leads.
2. With the ohm-meter set at the highest resistance scale, measure across the diode terminals. Reverse the meter leads and read the resistance. A meter with 6V, 9V or higher voltage batteries should be used to check the front-to back resistance of the diode (otherwise an infinite resistance may be read in both directions). The resistance of a normal diode will be infinite in one direction and several hundred KΩ in the other direction.

5-6 Main Relay and Power Control Relay

1. The relays are located on the PCB Ass'y. Isolate them from the main circuit by disconnecting the leads.
2. Operate the microwave oven with a water load in the oven. Set the power level set to high.
3. Check continuity between terminals of the relays after the start pad is pressed.

5-7 Adjustment of Primary Switch, Door Sensing Switch and Monitor Switch

Precaution!

For continued protection against radiation hazard, replace parts in accordance with the wiring diagram and be sure to use the correct part number for the following switches: Primary interlock and door sensing switches, and the interlock monitor switch (replace all together). Then follow the adjustment procedures below. After repair and adjustment, be sure to check the continuity of all interlock switches and the interlock monitor switch.

1. When mounting Primary switch and Interlock Monitor switch to Latch Body, consult the figure.
2. No specific adjustment during installation of Primary switch and Monitor switch to the latch body is necessary.
3. When mounting the Latch Body to the oven assembly, adjust the Latch Body by moving it so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the Latch Body to the oven assembly.
4. Reconnect to Monitor switch and check the continuity of the monitor circuit and all latch switches again by following the components test procedures.
5. Confirm that the gap between the switch housing and the switch actuator is no more than 0.5mm when door is closed.

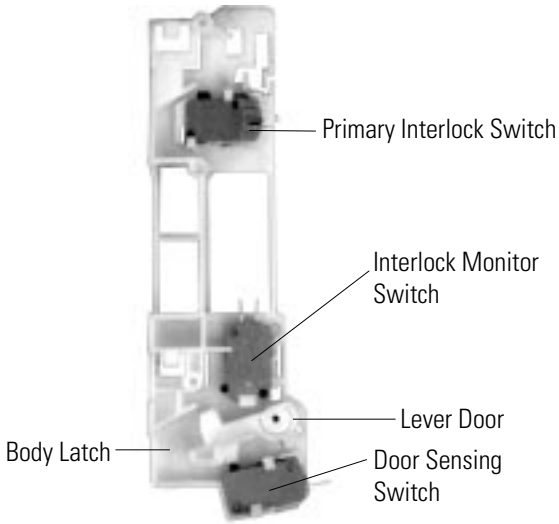

	Door Open	Door Closed
Primary switch	∞	0
Monitor switch (COM-NC)	0	∞
Door Sensing S/W	∞	0

5-8 Output Power of Magnetron

CAUTION
MICROWAVE RADIATION

PERSONNEL SHOULD NOT ALLOW EXPOSURE TO MICROWAVE RADIATION FROM MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

The output power of the magnetron can be measured by performing a water temperature rise test.
Equipment needed :

* Two 1-liter cylindrical borosilicate glass vessel (Outside diameter 190 mm)
* One glass thermometer with mercury column

NOTE: Check line voltage under load. Low voltage will lower the magnetron output. Make all temperature and time tests with accurate equipment.

1. Fill the one liter glass vessel with water.
2. Stir water in glass vessel with thermometer, and record glass vessel's temperature ("T1", 10±0.2˚C).
3. After moving the water into another glass vessel, place it in the center of the cooking tray. Set the oven to high power and operate for 44 seconds exactly. (1 seconds included as a holding time of magnetron oscillation:)
4. When heating is finished, stir the water again with the thermometer and measure the temperature ("T2").
5. Subtract T1 from T2. This will give you the water temperature rise. (ΔT)
6. The output power is obtained by the following formula;

$$\text{Output Power} = \frac{4.187 \times 1000 \times \Delta T + 0.55 \times Mcx(T_2 - T_0)}{41}$$

41.87: Heating Time (sec)
4.187 : Coefficient for Water
1000 : Water (cc)
ΔT : Temperature Rise (T2-T1)
Mc : Cylindrical borosilicate glass weight
To : Room temperature.

7. Normal temperature rise for this model is 9.9˚C to 10.5˚C at 'HIGH'.
   NOTE 1: Variations or errors in the test procedure will cause a variance in the temperature rise. Additional power test should be made if temperature rise is marginal.
   NOTE 2: Output power in watts is computed by multiplying the temperature rise (step 5) by a factor of 91 times the of centigrade temperature.

5-9 Procedure for Measurement of Microwave Energy Leakage

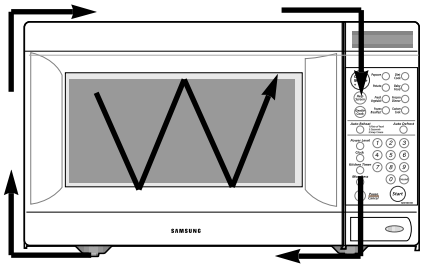

1) Pour 275±15cc of 20±5˚C(68±9˚F) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
2) Start to operate the oven and measure the leakage by using a microwave energy survey meter.
3) Set survey meter with dual ranges to 2,450MHz.
4) When measuring the leakage, always use the 2 inch spacer cone with the probe. Hold the probe perpendicular to the cabinet door. Place the spacer cone of the probe on the door and/or cabinet door seam and move along the seam, the door viewing window and the exhaust openings moving the probe in a clockwise direction at a rate of 1 inch/sec. If the leakage testing of the cabinet door seam is taken near a corner of the door, keep the probe perpendicular to the areas making sure that the probe end at the base of the cone does not get closer than 2 inches to any metal. If it gets closer than 2 inches, erroneous readings may result.
5) Measured leakage must be less than 4mW/cm^2, after repair or adjustment.

> Maximum allowable leakage is 5mW/cm^2.
> 4mW/cm^2 is used to allow for measurement and meter accuracy

5-10 Check for Microwave Leakage

1. Remove the outer panel.
2. Pour 275±15cc of 20±5˚C(68±9˚F) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
3. Start the oven at the highest power level.
4. Set survey meter dual ranges to 2,450MHz.
5. Using the survey meter and spacer cone as described above, measure arnear the opening of magnetron, the surface of the air guide and the surface of the wave guide as shown in the following photo.(but avoid the high voltage components.) The neading should be less than 4mW/cm2.

5-11 Note on Measurement

1) Do not exceed the limited scale.
2) The test probe must be held on the grip of the handle, otherwise a false reading may result when the operator's hand is between the handle and the probe.
3) When high leakage is suspected, do not move the probe horizontally along the oven surface; this may cause damage to the probe.
4) Follow the recommendation of the manufacturer of the microwave energy survey meter.

5-12 Leakage Measuring Procedure

5-13-1 Record keeping and notification after measurement

1) After adjustment and repair of a radiarion preventing device, make a repair record for the measured values, and keep the data.
2) If the radiation leakage is more than 5 mW/cm^2 after determining that all parts are in good condition, functioning properly and the identical parts are replaced as listed in this manual notift that fact to ;

CENTRAL SERVICE CENTER

5-13-2 At least once a year have the microwave energy survey meter checked for accuracy by its manufacturer.

6. Troubleshooting

PRECAUTION!

1. CHECK GROUNDING BEFORE CHECKING FOR TROUBLE.
2. BE CAREFUL OF THE HIGH VOLTAGE CIRCUIT.
3. DISCHARGE THE HIGH VOLTAGE CAPACITOR.
4. WHEN CHECKING THE CONTINUITY OF THE SWITCHES OR TRANSFORMER, DISCONNECT ONE LEAD WIRE FROM THESE PARTS AND THEN CHECK CONTINUITY WITHOUT THE POWER SOURCE ON. TO DO OTHERWISE MAY RESULT IN A FALSE READING OR DAMAGE TO YOUR METER.
5. DO NOT TOUCH ANY PART OF THE CIRCUIT OR THE CONTROL CIRCUIT BOARD, SINCE STATIC DISCHARGE MAY DAMAGE IT. ALWAYS TOUCH GROUND WHILE WORKING ON IT TO DISCHARGE ANY STATIC CHARGE BUILT UP.

6-1 Electrical Mulifunction

SYMPTOM	CAUSE	CORRECTIONS
Oven is dead. Fuse is OK. No display and no operation at all.	1. Open or loose lead wire harness 2. Open thermal cutout (Magnetron) 3. Open low voltage transformer 4. Defective Ass'y PCB	Check fan motor when thermal cutout is defective. Check Ass'y PCB when LVT is defective.
No display and no operation at all. Fuse is blown.	1. Shorted lead wire harness 2. Defective primary latch switch (NOTE 1) 3. Defective monitor switch (NOTE1) 4. Shorted HVCapacitor 5. Shorted HVTransformer (NOTE2)	Check adjustment of primary, interlock monitor, door sensing switch.
	NOTE 1: All of these switches must be replaced at the same time. (refer to adjustment instructions) Check continuity of power relay contacts and if it has continuity, replace power relay also. NOTE 2: When HVTransformer is replaced, check diode and magnetron also.	
Oven does not accept key input (Program)	1. Key input is not in-Sequence 2. Open or loose connection of membrane key pad to Ass'y PCB 3. Shorted or open membrane panel 4. Defective Ass'y PCB	Refer to operation procedure. Replace PCB main.
Timer starts countdown but no microwave oscillation. (No heat while oven lamp and fan motor turn on.)	1. Off-alignment of latch switches 2. Open or loose connection of high voltage circuit especially magnetron filament circuit NOTE: Large contact resistance will bring lower magnetron filament voltage and cause magnetron to lower output and/or intermittent oscillation. 3. Defective high voltage components H.V.Transformer H.V.Capacitor H.V.Diode Magnetron 4. Open or loose wiring of power relay 5. Defective primary latch switch 6. Defective power relay or Ass'y PCB	Adjust door and latch switches. Check high voltage component according to component test procedure and replace if it is defective. Replace PCB main.

6-2 Electrical Mulifunction(continued)

SYMPTOM	CAUSE	CORRECTIONS
Oven lamp and fan motor turn on	1. Misadjustment or loose wiring of primary latch switch 2. Defective primary latch switch	Adjust door and latch switches.
Oven can program but timer does not start.	1. Open or loose wiring of secondary interlock switch 2. Off-alignment of primary interlock 3. Defective secondary interlock S/W	Adjust door and interlock switches.
Microwave output is low;. Oven takes longer time to cook food.	1. Decrease in power source voltage. 2. Open or loose wiring of magnetron filament circuit. (Intermittent oscillation)) 3. Aging of magnetron	Consult electrician.
Fan motor turns on when plugged in	Loose wiring of door sensing switch	Check wire of door sensing switch.
Oven does not operate and return to the plugged in mode.	Defective Ass'y PCB	Replace PCB main.
Loud buzzing noise can be heard.	1. Loose fan and fan motor 2. Loose screws on H.V.Transformer 3. Shorted H.V.Diode	Tighten screws of fan motor. Tighten screws of H.V.Transformer. Replace H.V.Diode.
Turntable motor does not rotate.	1. Open or loose wiring of turntable motor. 2. Defective turntable motor.	Check the wire of turntable motor. Replace turntable motor.
Oven stops operation during cooking	1. Open or loose wiring of primary interlock switch 2. Operation of thermal cutout(Magnetron)	Adjust door and latch switches.
Sparks	1. Metallic ware or cooking dishes touching on the oven wall. 2. Ceramic ware trimmed with gold or silver powder also causes sparks.	Inform the customer. Do not use any type of cookware with metallic trimming.
Uneven cooking	Uneven intensity of microwave due to its characteristics.	Wrap thinner parts of the food with aluminum foil. Use plastic wrap or cover with a lid. Stir once or twice while cooking foods such as soup, cocoa, or milk.
Noise from the turntable motor when it starts to operate.	Noise may result from the motor.	Replace turntable motor.

7. Exploded Views and Parts List

7-1 Exploded Views

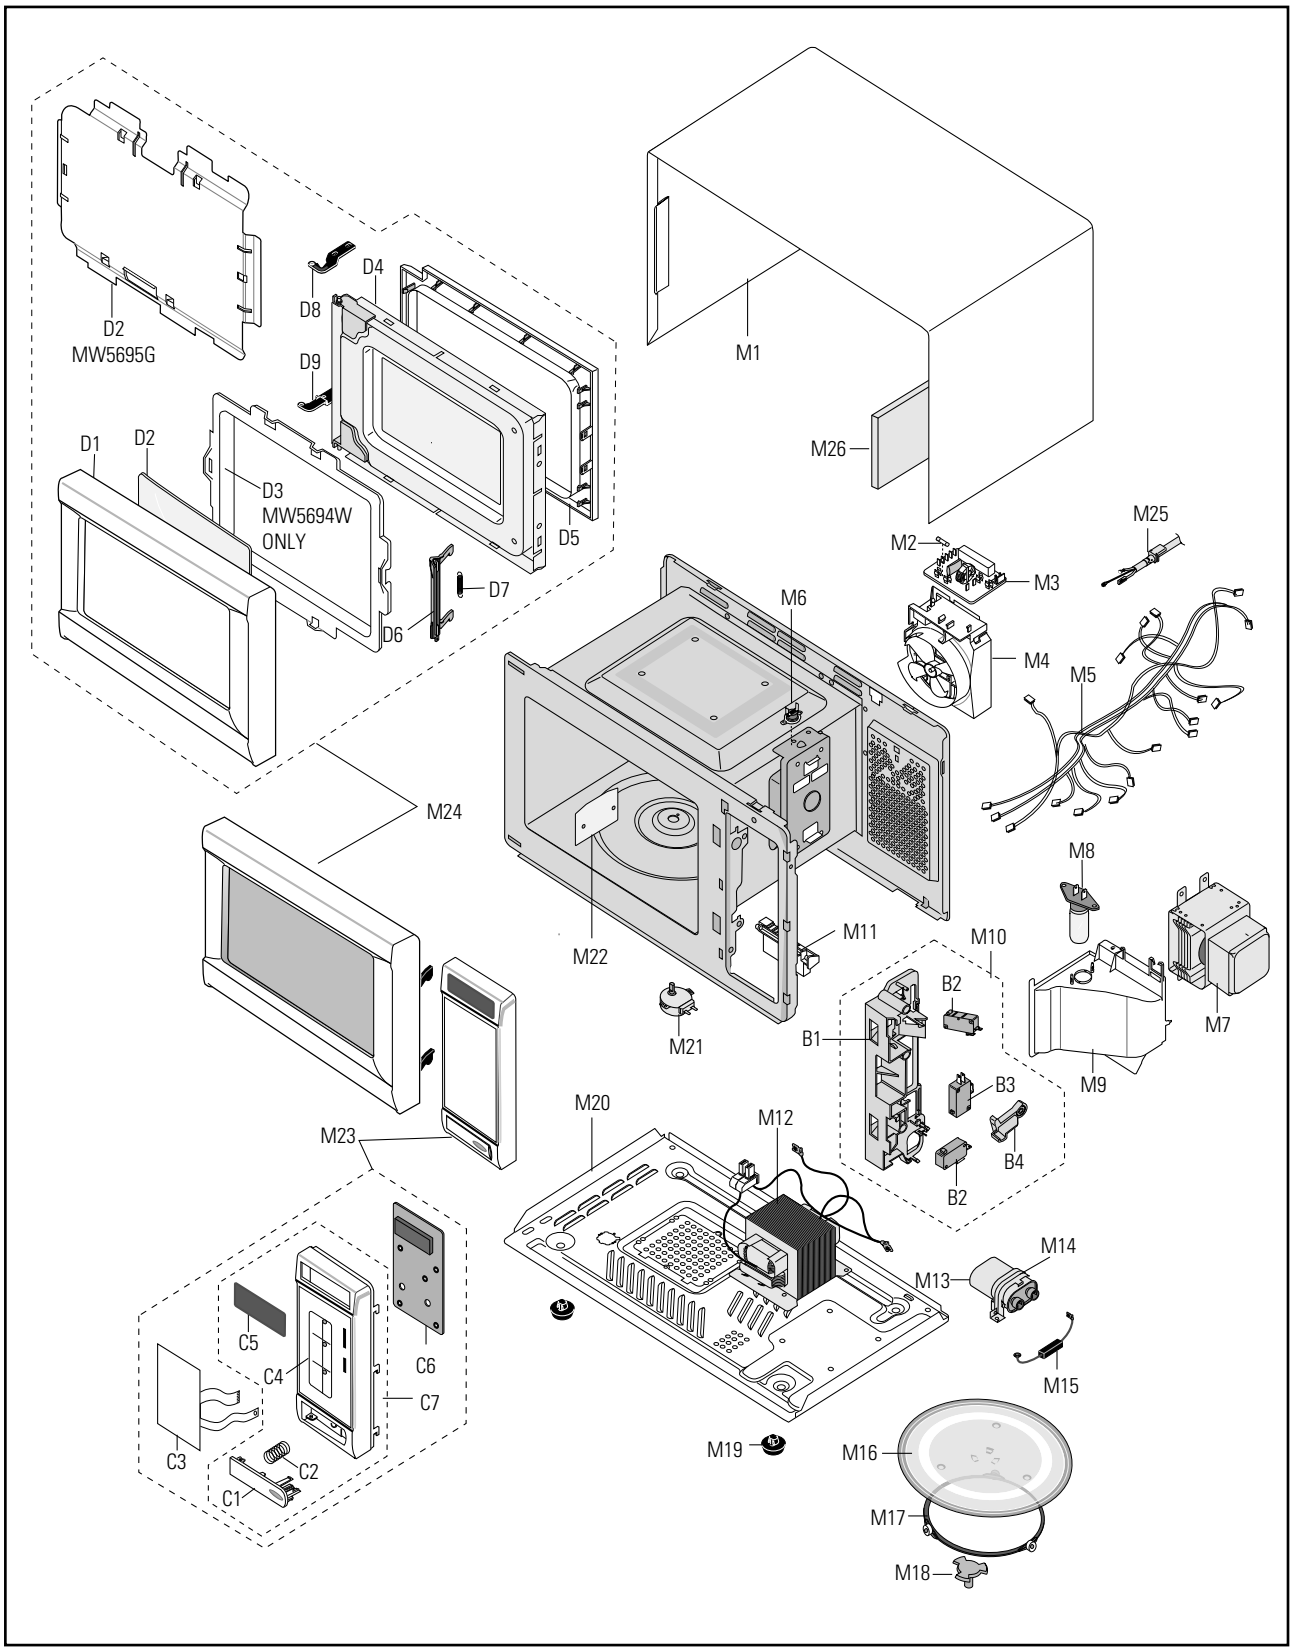

7-2 Main Parts List

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
M 1	DE70-00011A	PANEL-OUTER;WHT,T0.6,360,1128,MW5896W	1	WHITE
M 1	DE70-30001C	PANEL-OUTER;V/STEEL,T0.7,360,1128,STONE-GR	1	GRAY
M 2	3601-000440	FUSE-FERRULE;250V,20A,TL,CERAMIC,6.35x31.8m	1	
M 3	DE96-00012A	ASSY NOISE FILTER;SN-3WUB,250V20A,3W 20A,	1	
M 4	DE31-00002A	MOTOR-FAN;SMF-3RDUA1MW5896W,-,-,120V60HZ,2450RPM	1	
M 5	DE39-00031A	WIRE HARNESS-A;120V60HZ,-,-,MW5592W/XAC	1	
M 6	DE47-20173A	THERMOSTAT;PW-2N(90/60)30,187Y,250V7.5A,9	1	
M 7	DE03-30035A	MAGNETRON;OM75PH((31)ESS	1	⚠
M 8	4713-001012	LAMP-INCANDESCENT;130V,-,40W,ORG,B/L,-,25X71	1	CV/AIR
M 9	DE71-60458A	COVER-AIR;PP(TB53),78G,-,-,WHT,3RD-1.0/1.3 MW5896W	1	
M10	DE93-20101A	ASSY BODY LATCH;3RD-0.7,P/BUTTON,PP	1	
M11	DE66-90113A	LEVER-DOOR;PP(TB53-GH10),T2.5,W31X100.5,-,12G,NTR,3RD-W	1	
M12	DE26-10098B	TRANS-H.V;SHV-6574UC2,120V,2255V/3.45V,6	1	⚠
M13	2501-001016	C-OIL;950nF,2.1KV,BK,35x54x80,20mm	1	
M14	DE61-50106A	BRACKET-HVC;SECC,T0.8,W31,L125.8	1	
M15	DE91-70063A	ASSY-HVD;V2M6,PI9.0,0.05MT	1	
M16	DE74-20015G	TRAY-COOKING;T6,PI318,1115G,MW5896W	1	
M17	DE92-90189Q	ASSY-GUIDE ROLLER;CE2933	1	
M18	DE67-60026C	COUPLER;PTFE,12G,WHT,MB245	1	
M19	DE61-50579A	FOOT;PP,H8,PI15.8x16.1,-,BLK,3RD,-	2	
M20	DE80-10001F	BASE-PLATE;SGCC,T0.8,W345,L565,MW5896W	1	
M21	DE31-10154A	MOTOR-DRIVE;M2HJ49ZR02,ST-16,50/60HZ	1	
M22	DE71-00015A	COVER-CEILING;T0.3,W114.2,L121.5,-,CE2933	1	
M23	DE94-00106A	ASSY CONTROL-BOX;120V60HZ,MW5694W/XAA,WHT,IDEO	1	WHITE ⚠
M23	DE94-00106B	ASSY CONTROL-BOX;120V60HZ,MW5695G,D/GRY	1	GRAY ⚠
M24	DE94-00105A	ASSY DOOR;MW5694W/XAA,WHT,IDEO	1	WHITE ⚠
M24	DE94-00105B	ASSY DOOR;MW5695G,D/GRY	1	GRAY ⚠
M25	DE39-20037H	ASSY POWER CORD;120V60HZ,-,L1150,CSA,MW5592W/XAC	1	
M26	DE63-90035L	CUSHION-RUBBER;T3,W100,L190,-,MW5896W,BLK	1	

● : Option Parts ⚠ : Warning ⚠ :Electrostatically Sensitive Devices

7-3 Door Parts List

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
D 1	DE64-40334A	DOOR-A;ABS,400g,WHT,413.5x284,MW5694W	1	WHITE
D 1	DE64-40334B	DOOR-A;ABS,-,-,-,-,MW5695G	1	GRAY
D 2	DE67-20194A	SCREEN-DOOR;S2,-,-,-,-,CE2933(3RD-1.0)	1	WHITE ⚠
D 2	DE67-20187A	SCREEN-DOOR;SAN,T2.2,W377,L258,CLEAR,3RD-1	1	GRAY
D 3	DE64-40328A	DOOR-SUB;ABS,30g,WHT,-,MWA49BW(3RD-1.0)	1	WHITE ONLY
D 4	DE94-00073A	ASSY DOOR-SUB;3RD-1.0,MW5896W,WHT	1	WHITE
D 4	DE94-00073B	ASSY DOOR-SUB;3RD-1.0,MW5897G,BLK	1	GRAY
D 5	DE64-40012B	DOOR-C;PP(TB53),T2,MW5574W,WHT	1	WHITE
D 5	DE64-40012A	DOOR-C;RESIN-PP(TB53),T2.0,CE945GF,BL	1	GRAY
D 6	DE64-40006E	DOOR-KEY;POM(F20-02),-,-,12G,WHT,MW7896W,NO-TALK	1	WHITE
D 6	DE64-40006F	DOOR-KEY;POM(F20-02),-,-,12G,BLK,MW7897G,NO-TALK	1	GRAY
D 7	DE61-70128A	SPRING-KEY;HSW3,PI0.6,D5,BLUING	1	
D 8	DE61-80002A	HINGE-UPPER;SCP1,T2.3,26,77,ZPC3,WHT,CE945	1	
D 9	DE61-80003A	HINGE-LOWER;SCP1,T2.3,26,77,ZPC3,WHT,CE945	1	

7-4 Control Parts List

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
C 1	DE66-20286A	BUTTON-PUSH;ABS,-,-,25Zg,77x29,WHT,MW5694W	1	WHITE
C 1	DE66-20286B	BUTTON-PUSH;ABS,-,-,D/GRY,MW5695G	1	GRAY
C 2	DE61-70076A	SPRING-BUTTON;HSWR,PI0.6	1	
C 3	DE34-00014A	SWITCH-MEMBRANE;MW5694W,IDEO(WHT)	1	WHITE
C 3	DE34-00014B	SWITCH-MEMBRANE;PET,MW5695G,IDEO(D/GRY)	1	GRAY
C 4	DE72-70221A	CONTROL-PANEL;ABS,WHT,140g,102.2x284,MW5694W	1	WHITE
C 4	DE72-70221B	CONTROL-PANEL;ABS,MW5695G,-,-,-,-,D/GRAY	1	GRAY
C 5	DE67-40180A	WINDOW-DISPLAY;SAN,T2,W29.8,77.8,SMG,8g,MW569	1	
C 6	DE97-00004A	ASSY PCB-MAIN;RA-W3USA-00,MW7490W	1	⚠
C 7	DE94-00108A	ASSY CONTROL-PANEL;120V60HZ,MW5694W/XAA,WHT	1	WHITE
C 7	DE94-00108B	ASSY CONTROL-PANEL;120V60HZ,MW5695G,D/GRY	1	GRAY

7-5 Body Latch Parts List

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
B 1	DE66-40001C	LATCH-BODY;PP(FB53WH),-,39.2G,NTR,-,3RD-W ,MW5592W	1	
B 2	3405-000178	SWITCH-MICRO;250V,15A,200gf,SPST-NO	2	
B 3	3405-000175	SWITCH-MICRO;250V,15A,200gf,SPST-NO	1	
B 4	DE66-90114A	LEVER-S/W;PP(FB53WH),-,-,-,3.5G,NTR,3RD-W MW5592W	1	

7-6 Standard Parts List

Parts No.	Description / Specification	Q'ty	Remarks
DE60-10059A	SCREW-TAP TH;TH,M4,L8,SUS410,CR	2	C/CEILING
DE60-10080A	SCREW-WASHER;M5,L12,2S	4	MGT
DE60-10080A	SCREW-WASHER;M5,L12,2S	4	TNS-HV
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	3	B-PLTE
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	BD-LAT
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	CN-BOX
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	1	CV/AIR
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	MGT-TCO
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	MO-FAN
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	1	P-C-EA
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	3	PN/OUT
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	1	S-M-EA
DE60-10098A	SCREW-ASSY TAP TITE;PH,TC,M4X8,SWRCH18A,ZPC2,GLD,W	2	M/DRIV
DE60-10195A	SCREW-STAR POLE;TH,*,2,4,12,SWCH18A,ZNC	2	O/PANEL
DE60-20063A	BOLT-FLANGE;M4,10,ZPC3,YEL,MSWR	2	HI-LOW
DE60-20063A	BOLT-FLANGE;M4,10,ZPC3,YEL,MSWR	2	HI-UPP
DE60-10088A	SCREW-TAP PH;PH,M3,L8,FEFZY,PLAIN	2	-
DE60-10098A	SCREW-ASSY TAP TITE;PH,TC,M4X8,SWRCH18A,ZPC2,GLD,W	1	HVD

8. P.C.B Diagrams

8-1 P.C.B Diagrams

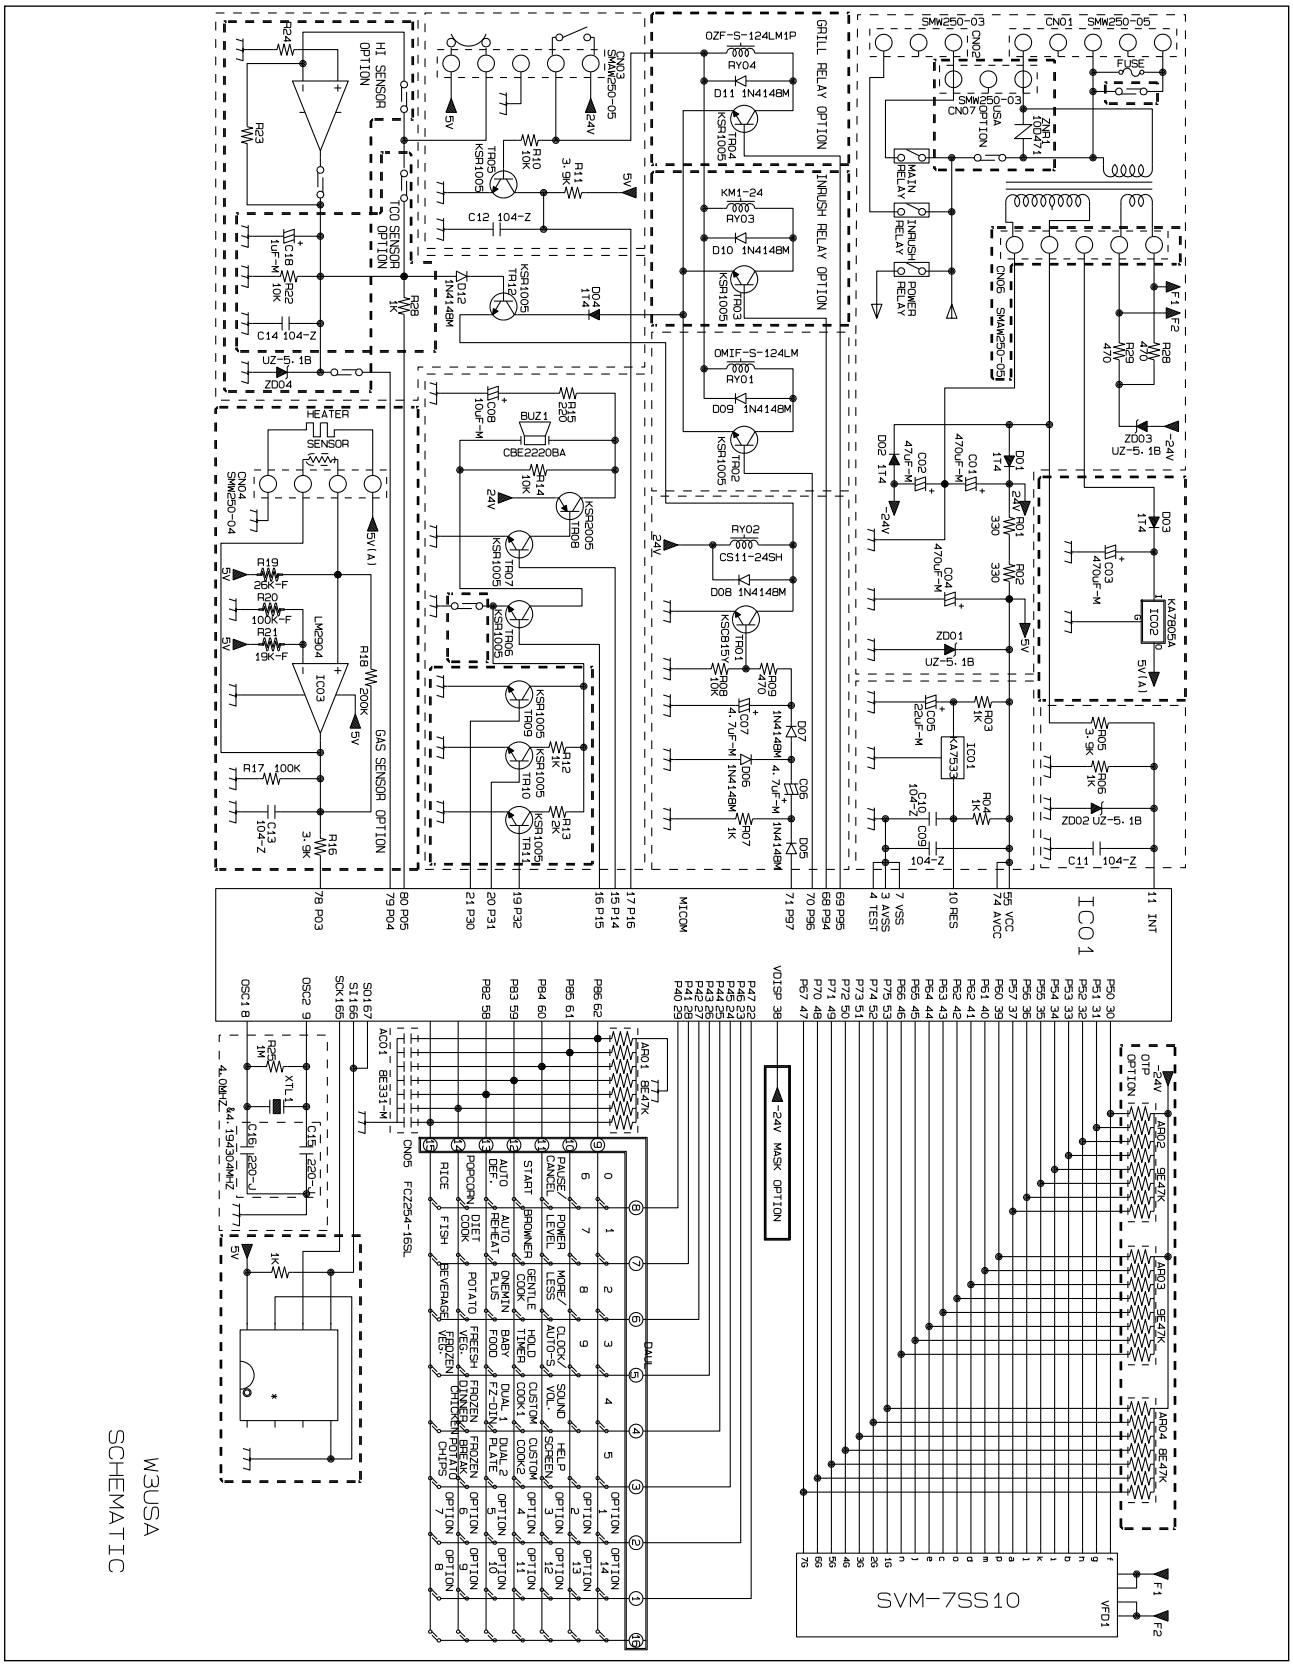

8-2 P.C.B Parts List

No.	Parts No.	Description / Specification	Q'ty	Remarks
P 1	0401-001002	DIODE-SWITCHING;1N4148M,100V,200mA,DO-34,TP	5	D05,D06,D07,D08,D09
P 2	0402-001103	DIODE-RECTIFIER;1T4,400V,1A,TS-1,TP	4	D01,D02,D03,D04
P 3	0403-000355	DIODE-ZENER;UZ5.1BSB,5.1V,4.97-5.18V,500mW	3	ZD01,ZD02,ZD03
P 4	0501-000388	TR-SMALL SIGNAL;KSC815,NPN,400mW,TO-92,BK,120-	1	TR01
P 5	0504-001014	TR-DIGITAL;KSR1005,NPN,300MW,4.7K/10K,TO-92,TP	4	TR02,TR05,TR06,TR07
P 5	0504-001014	TR-DIGITAL;KSR1005,NPN,300MW,4.7K/10K,TO-92,TP	3	TR09,TR10,TR11
P 6	0504-001015	TR-DIGITAL;KSR2005,PNP,300MW,4.7K/10K,TO-92,TP	1	TR08
P 7	1405-000001	VARISTOR;470V,2500A,14x8.5mm,TP	1	ZNR1
P 8	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	4	R08,R10,R14,R28
P 9	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	5	R03,R04,R06,R07,R12
P10	2001-000435	R-CARBON;1MOHM,5%,1/8W,AA,TP,1.8X3.2MM	1	R25
P11	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	1	R15
P12	2001-000577	R-CARBON;2KOHM,5%,1/8W,AA,TP,1.8X3.2MM	2	R05,R13
P13	2001-000613	R-CARBON;3.9KOHM,5%,1/8W,AA,TP,1.8X3.2MM	1	R11
P14	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	3	R09,R29,R30
P15	2001-001107	R-CARBON(S);220ohm,5%,1/2W,AA,TP,2.4x6.4mm	3	R01,R02,R31
P16	2011-000777	R-NETWORK;47KOHM,5%,1/8W,A,SIP,8P,TP	1	AR01
P17	2202-000780	C-CERAMIC,MLC-AXIAL;100nF,+80-20%,50V,Y5V,TP,3.5x1	5	C09,C10,C11,C12,C18
P18	2401-000244	C-AL;100uF,20%,10V,GP,TP,6.3x7,5	1	C04
P19	2401-000466	C-AL;10uF,20%,35V,GP,TP,5x7,5	1	C08
P20	2401-000914	C-AL;22uF,20%,16V,GP,TP,5x11,5	2	C05,C07
P21	2401-001415	C-AL;470uF,20%,35V,GP,TP,10x20,5	1	C01
P22	2401-001573	C-AL;47uF,20%,50V,GP,TP,6.3x11,2.5	1	C02
P23	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	1	C06
P24	2503-001014	C-NETWORK;1nFx7,+80-20%,50V,-	1	AC01
P25	2802-000161	RESONATOR-CERAMIC;4MHz,0.5%,TP,10.0x5.0x7.5mm	1	XTL1
P26	3711-000940	CONNECTOR-HEADER;BOX,4P,1R,2.5mm,STRAIGHT,SN	1	CN03
P27	3711-004143	CONNECTOR-HEADER;BOX,2P/3P,1R,5mm/2.5mm,STRAIGH	1	CN07
P28	DE13-20009A	IC;KA7533,DIP	1	IC02
P29	DE39-60001A	WIRE-SO COPPER;PI0.6,SN,T,52MM,TAPING_WIRE	6	J01,J02,J04,J05,J10,J11
P29	DE39-60001A	WIRE-SO COPPER;PI0.6,SN,T,52MM,TAPING_WIRE	5	J12,J13,J14,J15,J16
P30	DE41-00005A	PCB-BOARD;FR-1,MW7496W,W3USA,T1.6X163.88	1	-
P31	DE09-00019A	IC-MCU;HCD6433724-F15,3RD VFD,-,32K(8BIT)	1	- ⚠
P32	3501-001050	RELAY-MINIATURE;24VDC,200mW,5A,1FormA,10mS,5mS	1	RY02
P33	3501-001062	RELAY-POWER;24VDC,523.2mW,16A,1FormA,15mS,	1	RY01
P34	3708-000530	CONNECTOR-FPC/FC/PIC;16P,2.54mm,STRAIGHT,SN	1	CN05
P35	DE07-00004A	V.F.DISPLAY;SVM-07SS10L,3-RD,74.8*29.0*8.0MM,-,1/6.25	1	VFD1
P36	DE26-20144A	TRANS-L.V;SLV-5574U,120V,60HZ,AC17V/2.7V	1	LVT1
P37	DE30-20016A	BUZZER;CBE2220BA,STICK	1	BUZ1
P38	DE61-00005A	HOLDER-DIGITRON;NYLON,-,82X33X24,8G,BLK,3RD-W	1	-

9. Schematic Diagrams

9-1 Schematic Diagrams

NOTE: CIRCUIT SHOWN WITH DOOR IS OPENED POSITION.
NOTE: FOR SERVICE REPLACEMENT USE 16 GA 105°C
THERMOPLASTIC COVERED WIRE EXCEPT
FOR HIGH VOLTAGE LEADS OR AS NOTED ON SPECIAL LEADS.

WARNING
POWER MUST BE DISCONNECTED
BEFORE SERVICING THIS APPLIANCE

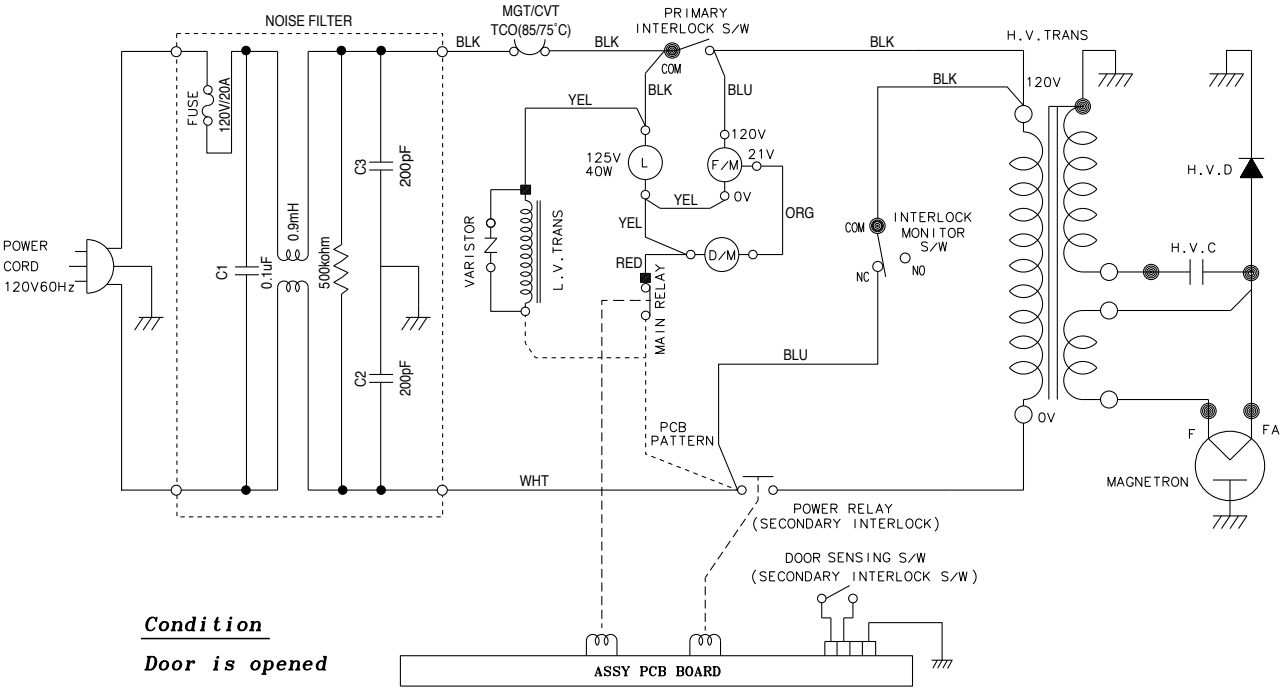

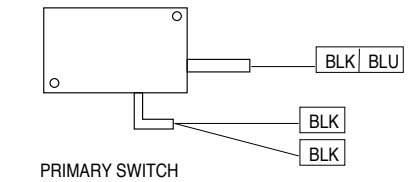

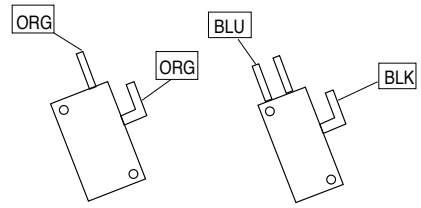

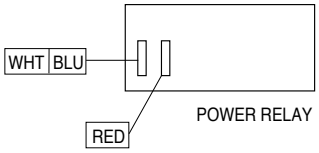

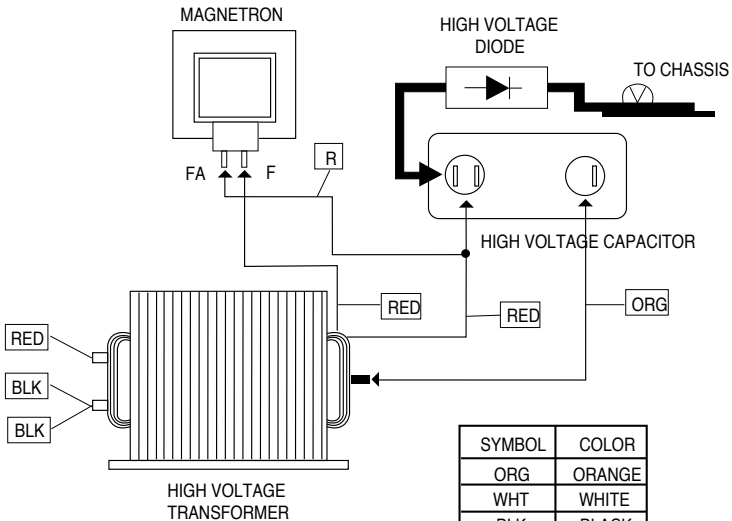

SYMBOL	COLOR
ORG	ORANGE
WHT	WHITE
BLK	BLACK
BLU	BLUE
RED	RED